


Fuel filters

- **Material:** PP
- **Operating Temperature:** -10°C to +40°C
- **Features:**
 - Petrol filters compatible with E10
- **Usage:** The fuel filter is used between the fuel pump and the throttle fuel line to filter out solid impurities in the fuel such as iron oxide and dust. When the fuel passes through the filter, it flows from the bottom up. The resistance of the oil in the filter will slow down the fuel flow rate in unit aera.

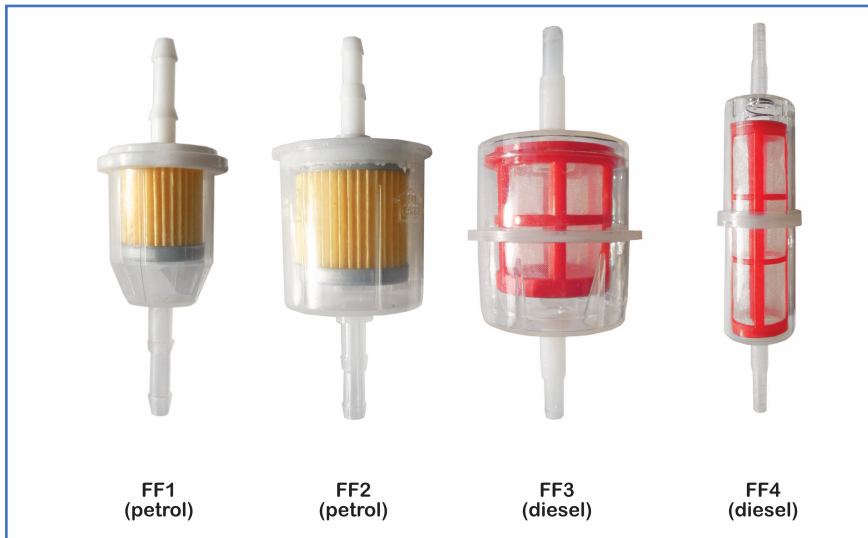

Un-marked tolerance	
Size(mm)	Tolerance
0.5~6	±0.1
>6~30	±0.2
>30~120	±0.3
>120~400	±0.5
>400~1000	±0.8
Angle	±1°

Item No.	Fuel type	Fits pipes (mm)	Filtering (microns)	Maximum pressure (MPa)	Height (mm)	Width (mm)
FF1	Petrol	6-8	≤50	1.0	110 ± 3	38±2
FF2	Petrol	6-8	≤50	1.0	125±3	52±2
FF3	Diesel	6-8	125	1.0	122±3	53±2
FF4	Diesel	8-10	250	1.0	211±2	46.5±2